


Thelin Hearth Products

# Parlour and Gnome Pellet Stove Maintenance Procedure

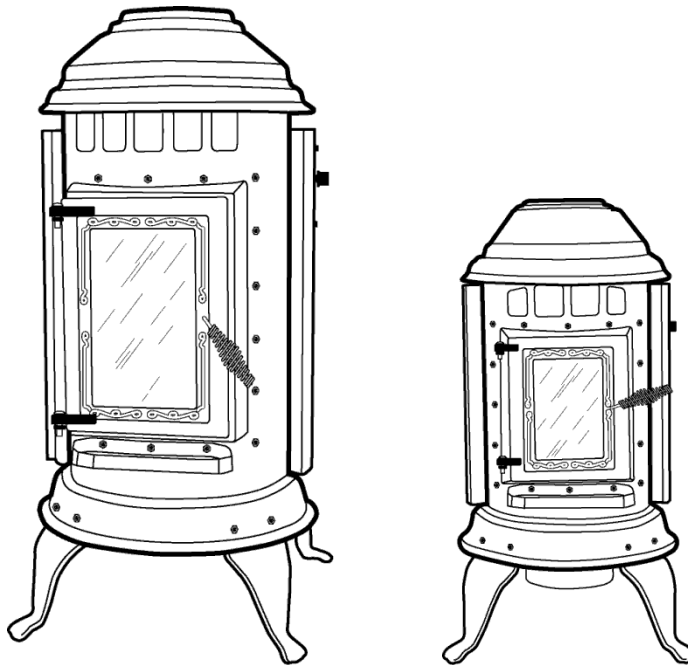

# Table of Contents

1.	Daily Maintenance	3
2.	Weekly Maintenance	4
3.	Monthly Maintenance	12
4.	Yearly Maintenance	13

## Parlour & Gnome Pellet Stove Daily Maintenance

### Step 1

**STOVE MUST BE COMPLETELY COLD BEFORE PERFORMING MAINTENANCE.**


Remove Firepot and thoroughly clean with a wire brush. Ensure holes are clear and are not obstructed by silica, clinkers or fly ash.



### Step 2

Scrape inside of Firepot with putty knife to remove clinkers. Ensure holes are unobstructed.

Reinstall Firepot.

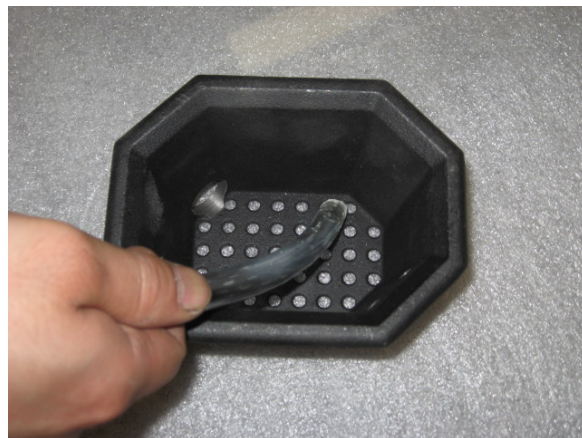

### Step 3

Wipe Front Door glass as needed.



# Parlour & Gnome Pellet Stove Weekly Maintenance

## Step 1

**STOVE MUST BE COMPLETELY COLD BEFORE PERFORMING MAINTENANCE.**

Open Front Door and remove left side Clean Out Cover.



## Step 2

Leave Front Door open so there is a one inch gap.



## Step 3

Press the "Clean" button on the Switch Panel and let stove run for 30 seconds then push "Off".




## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 4

Connect the vinyl vacuum hose to your ash vacuum.

If your ash vacuum does not have a fitting to accept the vinyl hose, use the vacuum adapter provided.

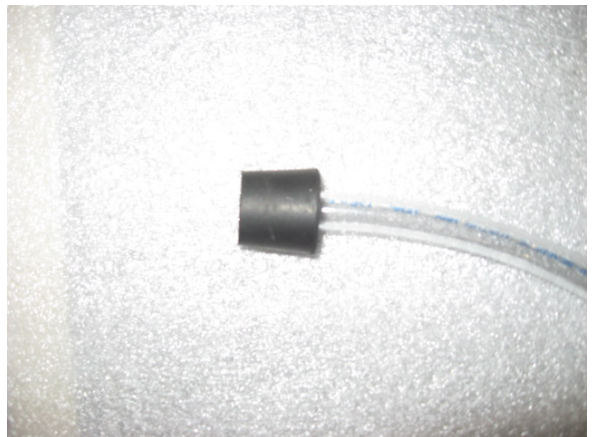

### Step 5

Thoroughly vacuum the left side heat exchanger compartment.

Reinstall Clean Out cover when done.



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 6

Remove the right side Clean Out Cover.



### Step 7

Leave Front Door open so there is a one inch gap.



### Step 8

Press the "Clean" button on the Switch Panel and let stove run for 30 seconds then push "Off".



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 9

Thoroughly vacuum the right side heat exchanger compartment.

Reinstall Clean Out cover when done.



### Step 10

Scrape Feed Chute with putty knife.

Remove creosote, fly ash build up and accumulated sawdust.



### Step 11

Remove Firepot and thoroughly clean with a wire brush. Ensure holes are clear and are not obstructed by silica, clinkers or fly ash.



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 12

Scrape inside of Firepot with putty knife to remove clinkers. Ensure holes are unobstructed.



### Step 13

Vacuum Feed Chute.



### Step 14

Vacuum Igniter hole.



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 15

Vacuum Firepot Holder compartment.

Reinstall Firepot when done.



### Step 16

Vacuum left side of stove ash pockets next to Firepot.



### Step 17

Vacuum right side of stove ash pockets next to Firepot.



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 18

Vacuum Fan Guard. Fan Guard must be kept free of dust build up and lint.

A blocked Fan Guard may cause stove to overheat, triggering the T1 Sensor and shutting the stove down.



### Step 19

Wipe Front Door glass.



### Step 20

Vacuum inside of Hopper as needed. Remove accumulated sawdust.

Excessive build up of sawdust can cause irregular pellet feed.



## Parlour & Gnome Pellet Stove Weekly Maintenance

### Step 21

Polish plated components as needed.

**Always clean gold plated parts only when the heater is cool.**



### Step 22

Wipe Front Door glass.



### Step 23

Vacuum inside of Hopper as needed. Remove accumulated sawdust.

Excessive build up of sawdust can cause irregular pellet feed.




# Parlour & Gnome Pellet Stove Monthly Maintenance

## Step 1


**STOVE MUST BE COMPLETELY COLD AND UNPLUGGED BEFORE PERFORMING MAINTENANCE.**

Check Clean Out Cap on Tee Connector on vent pipe.

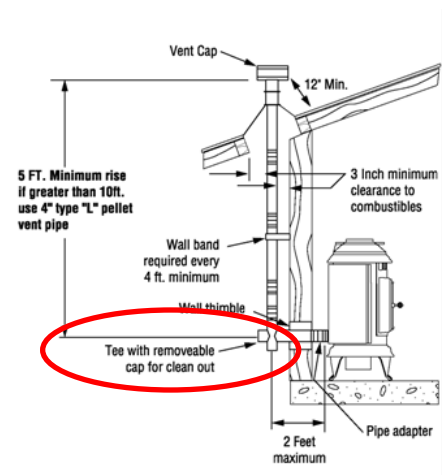

## Step 2

Inspect the exhaust system frequently. Fly ash can accumulate in the vent pipe. Initial monitoring of the build-up in the vent pipe is necessary.

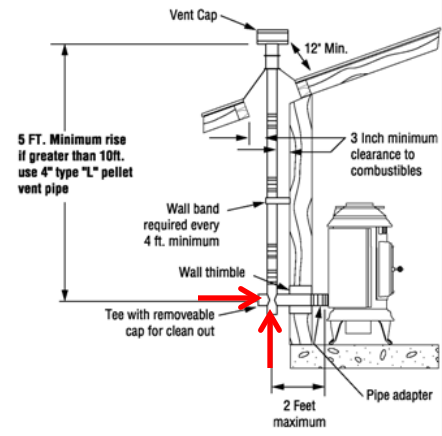


# Parlour & Gnome Pellet Stove Yearly Maintenance

## Step 1

**STOVE MUST BE COMPLETELY COLD AND UNPLUGGED BEFORE PERFORMING MAINTENANCE.**


Have certified personnel inspect and clean venting as needed.

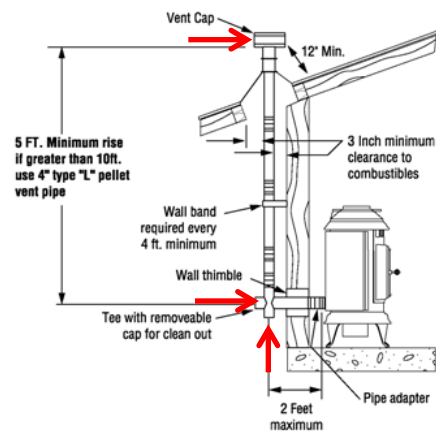

## Step 2

Have certified personnel clean combustion and exhaust fan assembly as needed.

See: "How To Replace Fan Motor Assembly" procedure.

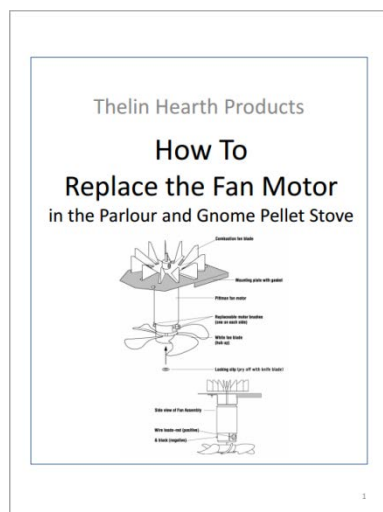

## Step 3

Inspect Door gasket. Replace as necessary.

See: "How To Replace Door Gasket" procedure.

